

# CDE350T-BK Cash Drawer

 
## Instruction Manual

V 1.0

### 1. INSTALLATION

The cash drawer is fitted with a standard 6-pin RJ11 plug for direct connection to any EPSON POS Printer, or POS equipment conforming to the Epson standard. (See figure below), when the printer finishes printing a receipt, it opens the cash drawer automatically.

**Connection:**

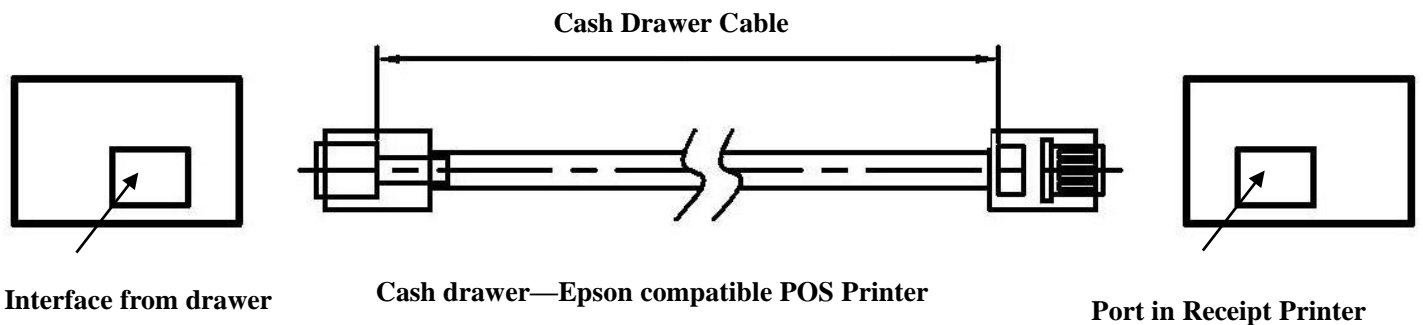


### 2. HOW TO OPEN THE DRAWER

**Lock Positions**

The key lock is a 4 lock function: the manual open which means turning the key to this position will open the drawer. The electronically on line position which means the drawer is controlled by the printer. Locked open / closed means the drawer can't be opened / closed without a key.

 
(See figure right)

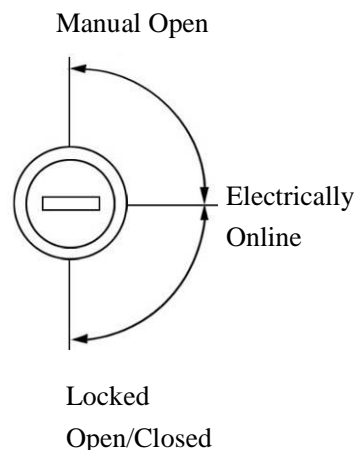

**Warning:** To reduce the risk of damaging or breaking the key, avoid leaving it in the lock during normal operation

### 3. DRAWER REMOVAL

 Open the cash drawer and remove the plastic coin and bill tray. Pull the drawer out until it stops, tip the front edge of the drawer up and pull the drawer out at an inclined angle.

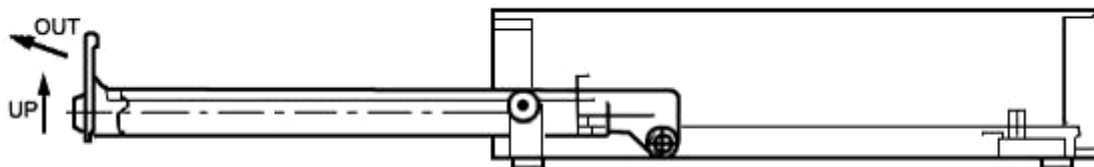

### 4. MAINTENANCE

The cash drawer slides should be periodically cleaned and lubricated. Frequency is dependent on use and the environment, but typical recommended frequency is every three months. Using a dry, lint free cloth, wipe out the old grease and debris from the inner and outer slides. Do not use water or any type of liquid cleaner. Using a clean applicator, apply a thin layer of lithium-based bearing grease to the inner and outer slides. Cycle the slides several times to properly coat the Polyurethane rollers and to spread the grease evenly.